


Fuses and Relays

FUSE BOX IN ENGINE COMPARTMENT

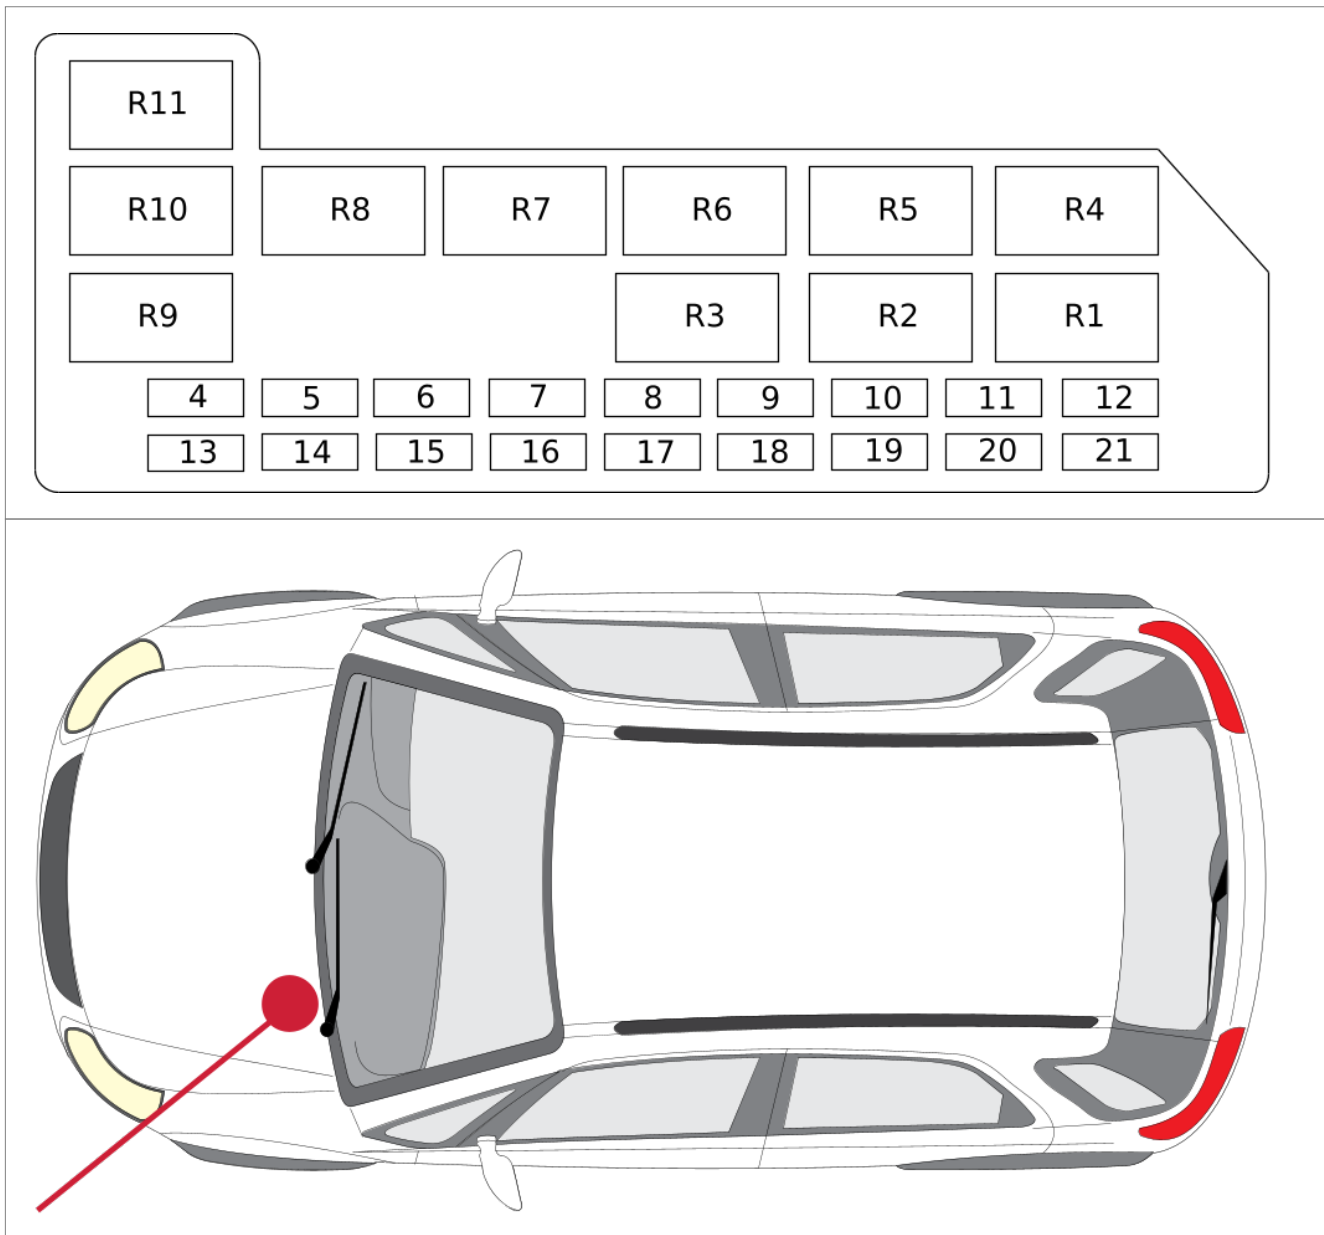

Left-hand drive is shown; no additional information is available for right-hand drive

4 [FI]	Main relay	(15A)
5 [AT]	Parking lock position (automatic transmission) Or Automatic transmission relay	(15A)
6	Not used	(15A)
7 [A/C]	Air-conditioning compressor relay Condenser fan relay	(20A)
8 [BLW]	Blower relay	(30A)
9	Not used	
10 [IGN]	Ignition switch	(50A)
11 [ST]	Starter motor relay	(30A)
12 [ABS SOL]	ABS control unit ESP control unit	(30A)
13 [RDTR]	Cooling fan relay	(30A)

Fuses and Relays

14 [ABS MOT]	ABS control unit ESP control unit	(40A)
15 [P/S]	Power steering control unit	(60A)
16	Not used	
17 [FR FOG]	Front fog light relay	(20A)
18 [H/L L]	Left headlight	(15A)
19 [H/L R]	Right headlight	
20	Not used	
21	Not used	
R1	Automatic transmission relay	
R2	Air-conditioning compressor relay	
R3	Fuel pump relay	
R4	Condenser fan relay	
R5	Front fog light relay	
R6	Throttle control motor relay or not used	
R7	Main relay	
R8	Starter motor relay	
R9	Shift lock relay	
R10	Not used	
R11	Cooling fan relay	