


Fuses and Relays

MAIN FUSE BOX IN ENGINE COMPARTMENT

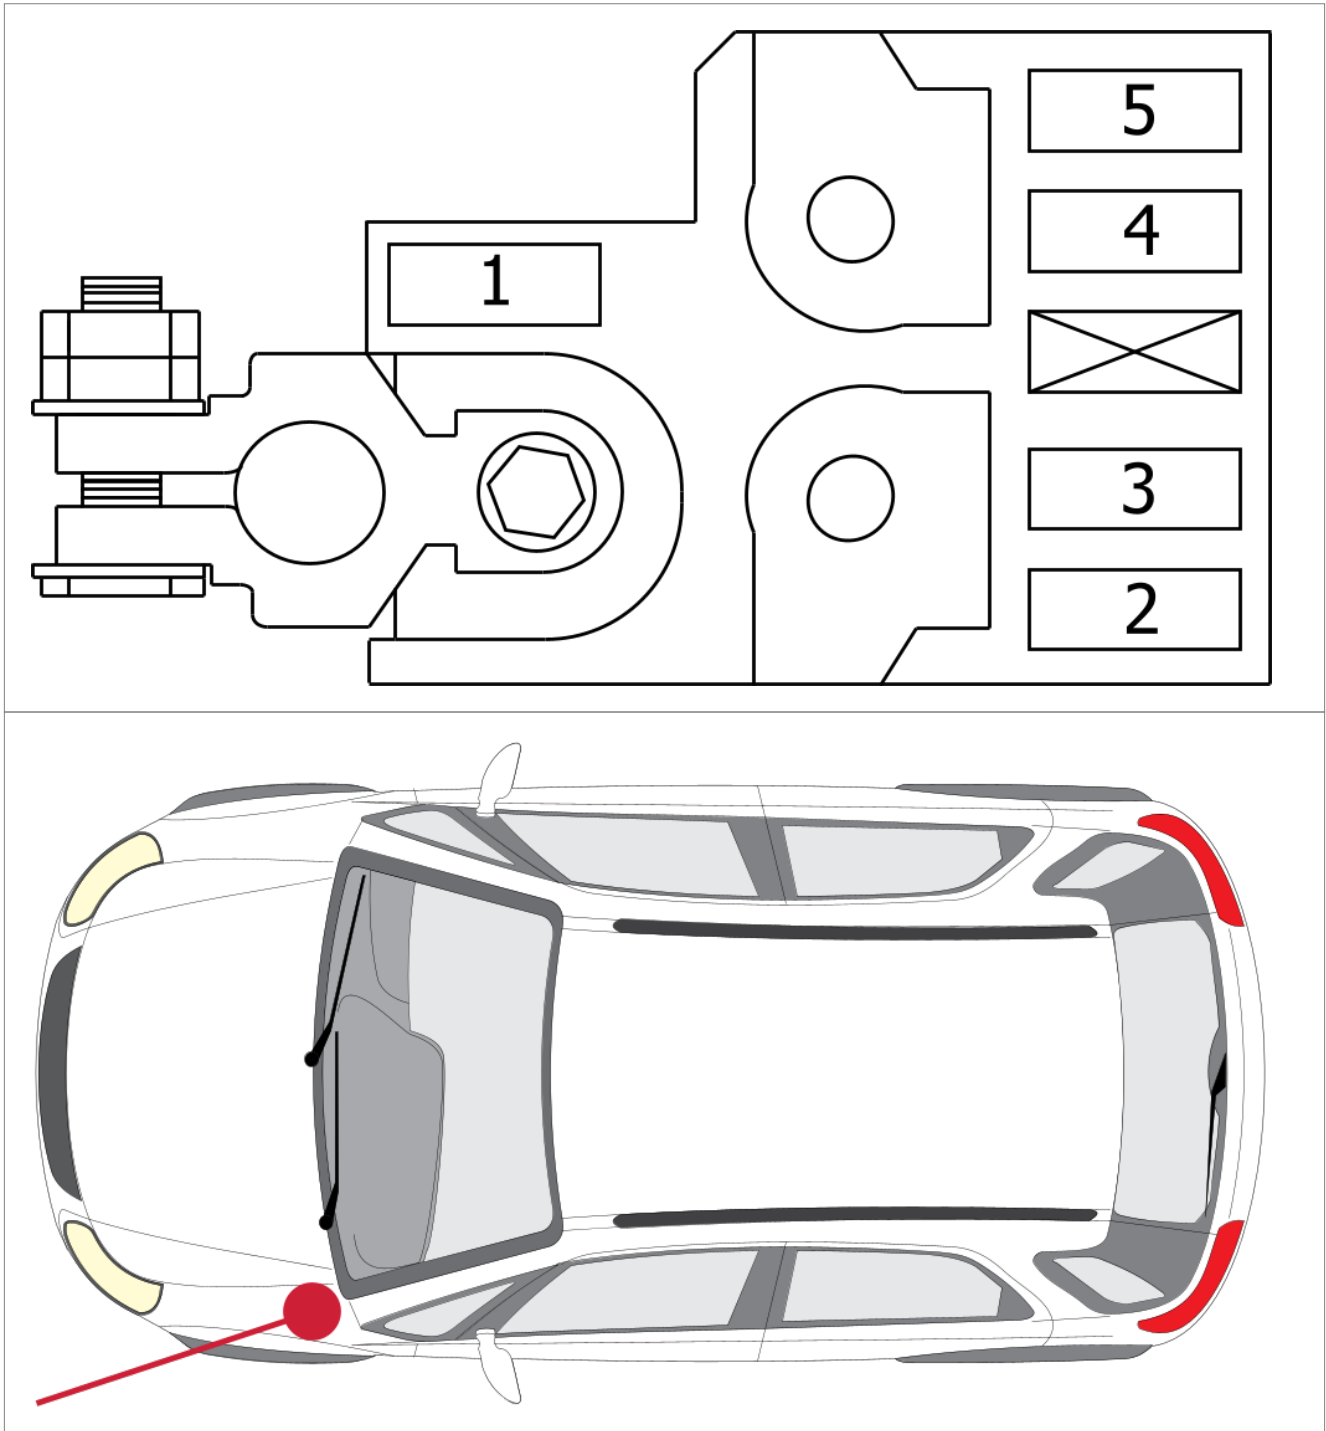

Left-hand drive is shown; no additional information is available for right-hand drive

| | | |
|---|--|-------|
| 1 | Main power supply and ground circuit Battery Generator | (80A) |
| 2 | Ignition switch | (50A) |
| 3 | Ignition switch Fuse box in passenger compartment | (50A) |
| 4 | Fuse box in engine compartment | (80A) |
| 5 | Fuse box in engine compartment | (80A) |