

Repair Manuals

Keys and remote controls

General

Maximum number of programmable remote controls: (4)

All previous codes will be erased

Any remote controls omitted from the programming sequence will no longer function

Note: If the number of registered codes exceeds the limit, the previously registered codes will be erased in order

Programming the remote control

Close the doors

Open the driver's door

Insert the key into the ignition switch

Turn the ignition on

Turn the ignition off

Within 10 seconds

Remove the key

Within 20 seconds

Close and open the driver's door 3 times

Insert the key into the ignition switch

Turn the ignition on

Turn the ignition off

Within 10 seconds

Remove the key

The hazard warning light will flash

The door locks will operate to confirm the programming mode has been entered

Press the unlock button on the remote control

The door locks will operate

Repeat the procedure for all remaining remote controls